

# OPERATING INSTRUCTIONS MANUAL

(Please retain for future reference)

For

## FVNP-400 INDIRECT FIRED SPACE HEATERS



**CERTIFIED FOR USE IN CANADA AND U.S.A.**

**As per Standard ANSI Z83.7/CSA 21.4 2000 Gas Fired Construction Heaters / Unattended Type.**



**FLAGRO INDUSTRIES LIMITED  
ST. CATHARINES, ONTARIO  
CANADA**

**GENERAL HAZARD WARNING:**

**FAILURE TO COMPLY WITH THE PRECAUTIONS AND INSTRUCTIONS PROVIDED WITH THIS HEATER, CAN RESULT IN DEATH, SERIOUS BODILY INJURY AND PROPERTY LOSS OR DAMAGE FROM HAZARDS OF FIRE, EXPLOSION, BURN, ASPHYXIATION, CARBON MONOXIDE POISONING, AND/OR ELECTRICAL SHOCK.**

**ONLY PERSONS WHO CAN UNDERSTAND AND FOLLOW THE INSTRUCTIONS SHOULD USE OR SERVICE THIS HEATER.**

**IF YOU NEED ASSISTANCE OR HEATER INFORMATION SUCH AS AN INSTRUCTIONS MANUAL, LABELS, ETC. CONTACT THE MANUFACTURER.**

**WARNING:**

**FIRE, BURN, INHALATION, AND EXPLOSION HAZARD. KEEP SOLID COMBUSTIBLES, SUCH AS BUILDING MATERIALS, PAPER OR CARDBOARD, A SAFE DISTANCE AWAY FROM THE HEATER AS RECOMMENDED BY THE INSTRUCTIONS. NEVER USE THE HEATER IN SPACES WHICH DO OR MAY CONTAIN VOLATILE OR AIRBORNE COMBUSTIBLES, OR PRODUCTS SUCH AS GASOLINE, SOLVENTS, PAINT THINNER, DUST PARTICLES OR UNKNOWN CHEMICALS.**

**WARNING:**

**NOT FOR HOME OR RECREATIONAL VEHICLE USE.**

**WARNING:**

**INTENDED USE IS PRIMARILY THE TEMPORARY HEATING OF BUILDINGS UNDER CONSTRUCTION, ALTERATION, REPAIR OR EMERGENCIES ONLY.**

**This heater is designed and approved for use as a construction heater under Standard ANSI Z83.7/ CGA 2.14. 2000.**

**We cannot anticipate every use which may be made of our heaters. CHECK WITH YOU LOCAL FIRE SAFETY AUTHORITY IF YOU HAVE QUESTIONS ABOUT APPLICATIONS.**

**Other standards govern the use of fuel gases and heat producing products in specific applications. Your local authority can advise you about these.**

### **SPECIFICATIONS**

Model .....	FVNP-400
Input .....	390,000 btuh
Fuel .....	Propane / Natural Gas
Manifold Pressure .....	1.5" W.C. Propane 2.0" W.C. NG
Maximum Inlet Pressure .....	13.0" W.C. Propane 10.0" W.C. NG
Electrical.....	120V 15 AMP
Ignition .....	Direct Spark Ignition
.....	Thermostat Control
Air Circulation .....	2500 cfm
Fuel Consumption .....	18.5 lbs/hr Propane 380 cfh NG
Approved .....	cETLus listed

## INSTALLATION:

The installation of this heater for use with natural gas shall conform with local codes or, in the absence of codes, with the National Fuel Gas Code ANSI Z233.1/NFPA 54 and the Natural Gas and Propane Installation Code, CSA B149.1-00. This heater must be installed by a qualified gas technician, following local codes published by the authority having jurisdiction. All installations performed in the state of Massachusetts must be completed by a qualified plumber and gas fitter of the State of Massachusetts.

The installation of this heater for use with propane tank or cylinder shall conform with Local codes or, in the absence of local codes, to the Standard for the Storage and Handling of Liquefied Petroleum Gases, ANSI Z233/NFPA 54 and the Natural Gas and Propane Installation Code, CSA B149.

This heater must be located at least 10ft (3m) from any propane gas cylinder. This heater shall not be directed toward any propane gas container within 20ft (6m).

## CLEARANCE TO COMBUSTIBLES:

<u>TOP</u>	<u>FRONT</u>	<u>SIDES</u>	<u>REAR</u>	<u>FLUE PIPE</u>
3 ft	10 ft	3 ft	3 ft	3 ft

## ELECTRICAL:

### WARNING

#### Electrical Grounding Instructions

This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle.

115v supply must be available. Please note that the heater requires 15 amps for proper operation. Ensure appropriate gauge extension cord is used.

- 12/3 AWG at 50 Feet
- 10/3 AWG at 100 Feet

## CONNECTING THE CYLINDER

If cylinders are used to supply the heater, no cylinders smaller than 100lb capacity shall be used. These cylinders must supply a vapor withdrawal only.

1. All cylinder connections must be made using a wrench to tighten the POL fitting.
2. Be sure that the cylinder valve is in the closed position when connection or disconnecting the cylinder.
3. A soap and water solution must be applied to all connections in order to leak check the system.

The gas must be turned off at the propane supply cylinder(s) when the heater is not in use. When the heater is to be stored indoors, the connection between the propane supply cylinder(s) and the heater must be disconnected and the cylinders removed from the heater and stored in accordance with Standard for the Storage and Handling of Liquefied Petroleum Gases, ANSI/NFPA 58 and CSA B149.1, Natural Gas and Propane Installation Code.

**PIPING:** This heater must be installed by a qualified gas technician following local codes published by the authority having jurisdiction. Sizing of supply piping must be determined using the length of pipe run as well as total btuh rating of the appliance(s). Appropriate piping tables must be used to determine size of supply piping dependant on the length of run from source.

<b>PRESSURES:</b>	MAXIMUM INLET PRESSURES:	LP: 13.0 IN. WC.
		NG: 10.0 IN. WC.

	MINIMUM INLET PRESSURES:	LP: 8.0 IN. WC.
		NG: 4.0 IN. WC.

This heater must be supplied by pressures indicated on the approval label. Over pressure may cause controls to fail.

DO NOT supply this unit with more than ½ psig (14.0 in. W.C.)

Note: A second stage regulator must be installed if the supply pressure exceeds ½ psig.

**FUEL:** This heater is a dual fuel heater and operates on propane & natural gas. The manifold pressures are listed on the approval label.  
You do not need to change any of the burner components; you just however, **make sure the fuel selector valve is in the proper fuel position.**

**IMPORTANT**

**Once the fuel selector valve is in the correct position, A LOCKING MECHANISM IS RECOMMENDED TO BE USED ON THE FUEL VALVE TO PREVENT SOMONE FROM MOVING THE VALVE TO THE INCORRECT FUEL POSTION. SEE LABEL ON THE HEATER FOR THE VLAVE POSITION.**  
**IF THE FUEL VALVE IS IN THE INCORRECT POSITION, POTENTIAL HARM TO THE HEATER AND PERSONEL CAN OCCUR.**

**HOSES:** All hoses used to connect this heater of fuel supply must be Type 1 approved propane / natural gas hose assemblies.

**POWER SUPPLY INDICATOR LIGHT:**

The power supply indicator light will help detect any faulty power supplied to the heater such as; grounding issues, reverse polarity or missing/poor connections

**Warning Light Indications**

Green Light ..... Meets Power Requirements

Solid Red Light..... Reverse Polarity

Solid Red & Green Light... Ground Issue



**ATTENTION: IF SOLID RED & GREEN IS INDICATED, MAKE CORRECTIONS TO POWER SUPPLY BEFORE TURNING HEATER ON. FAILURE TO DO SO WILL VOID ANY WARRANTY.**

**DUCTING:**

Hitex heater duct with a minimum temperature handling of 300 deg F. including wire reinforcement to prevent collapsing. Heater is designed for use with 2 x 12" diameter ducts equipped with pin lock couplings (FV-HD12).

**MAX. OF 50 FT OF DUCTING TO BE USED**

Install ducting to outlet on the heater using pin-locks provided on collar of ducting. Ducting should be inspected periodically for tearing and/or wear marks. Ducting should be stored in a dry area when not in use

**FLUE PIPE:**


For outdoor applications the flue pipe connection must terminate with a vertical run at least 2 ft long with rain cap.

For indoor installations the venting must consist of a minimum 2 ft vertical run to a maximum of 20ft total vent length. See diagram below for horizontal vent installation.


The vent outlet on the heater is 6" diameter. Certified venting must be used at all times. Vent cap should be installed in situations where downdrafts occur. All venting must correspond with the CSA B149 standard or in its absence, local codes.

## FV SERIES CONSTRUCTION HEATER – VENTING REQUIREMENTS

### 1. VERTICAL FLUE TERMINATIONS

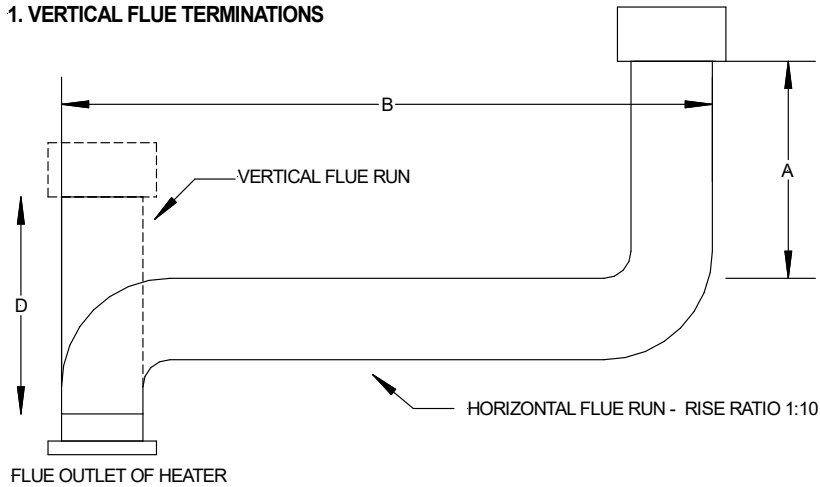

### 2. HORIZONTAL FLUE TERMINATIONS

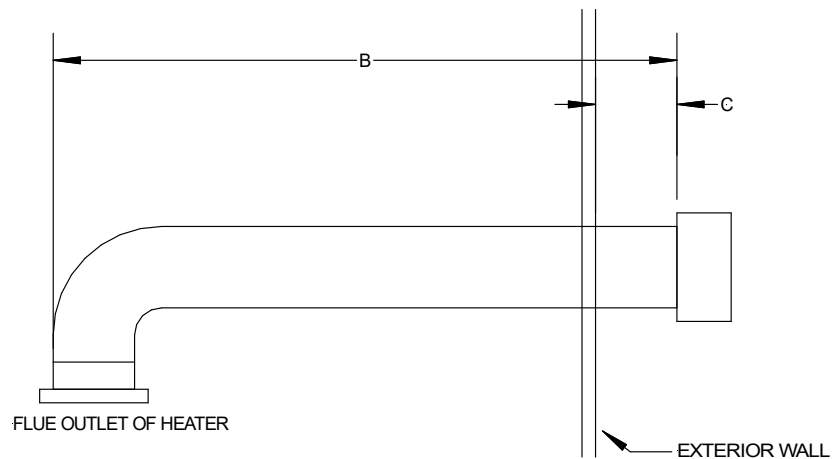

- A - VENT TERMINATION MUST BE A MINIMUM OF 2FT HIGHER THAN ANY POINT WITHIN 10FT.
- B - MAXIMUM HORIZONTAL RUN IS 30FT.  
NOTE: 90deg ELBOW = 10ft HORIZONTAL VENT ALLOWANCE  
45deg ELBOW = 5ft HORIZONTAL VENT ALLOWANCE
- C - VENT TERMINATION IN HORIZONTAL POSITION MUST BE MINIMUM 4ft FROM ANY COMBUSTABLE SURFACE
- D - EXTERIOR VERTICAL VENT TERMINATION MUST BE A MINIMUM OF 2ft.

NOTE: ALL VENT TERMINATIONS MUST HAVE A RAIN CAP INSTALLED AS PER LOCAL CODE REQUIREMENTS.



## MAINTENANCE:

1. **Every construction heater should be inspected before each use, and at least annually by a qualified service person. Incorrect maintenance may result in improper operation of the heater and serious injury could occur.**

2. Service and maintenance should only be done by a qualified service person.

The hose assemblies shall be visually inspected prior to each use of the heater. If it is evident there is excessive abrasion or wear, or the hose is cut, it must be replaced prior to the heater being put into operation. The replacement hose assembly shall be that specified by the manufacturer.

3. The appliance must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids.
4. The flow of combustion and ventilation air must not be obstructed. Be sure to check the fan assembly and ensure that the motor and blade are operating properly.
5. Compressed air should be used to keep components free of dust and dirt build up. Note: Do not use the compressed air inside any piping or regulator components.
6. Fan Limit Switch (Part# FV-407A) should be replaced if the fan motor does not shut off after the heat exchanger has cooled down.
7. High Limit Switches (Part# FV-406 and FV-437) should be checked each season. These limit switches will ensure the burner shuts down if the temperature exceeds 150°F degrees at rear of unit and 250°F at the outlet.
8. Heat Exchanger should be cleaned if smokey conditions continue even after the air adjustments on the burner are made.

## START UP INSTRUCTIONS

1. Position heater properly on a level surface.
2. Be sure the toggle switch is in the "OFF" position.
3. Connect gas supply to heater (leak test all connections) Refer to chart 1 for hose sizing
4. **Verify the fuel valve on the heater is in the correct fuel position and the valve has a locking mechanism.**
5. Ensure burner "air gate" is properly set. (LP – 4.8 & NG – 4.0)
6. Ensure electrical cord is grounded & plugged into a 115V 15amp outlet. Verify cord Size (12/3AWG AT 50FT & 10/3AWG AT 100FT)
7. The power indicator light on the control box will engage, If Green light is on, you have proper power supply. If not, see sticker on heater to verify warning problem and correct the problem before operating the heater.
8. Move toggle switch to "MANUAL" position for manual control.
9. Move toggle switch to "THERMOSTAT" position for thermostat control.
10. Once the burner has started, you will need to verify and set manifold pressure. See rating plate for manifold pressure.
11. Using a manometer, verify that manifold pressure is being achieved. If needed, correct manifold pressure by adjusting the set screw on the RV52 regulator. (small grey appliance regulator on the manifold, rated for ½ PSI)

### **Please Note:**

1. If using Thermostat on heater, heater must be started in Thermostat position.
2. When changing between manual and thermostat operation, the heater must be left in the "OFF" position for 30 seconds to prevent the burner from locking out.
3. When using a generator for electrical supply, make sure the generator is properly grounded and generator is at a 60Hz frequency.

4. In the event that a generator is being used and the generator runs out of fuel, make sure the heater switch is in the "OFF" position before restarting generator, failure to do so may damage heater.

### **TO SHUT DOWN**

1. Close main gas supply valve while heater is operating.
2. Move switch to "OFF" position. Main fan will run until heat exchanger cools down. Do not disconnect power supply until the heat exchanger cools down.
3. Disconnect fuel supply from heater.

**NOTE:** Fan will continue to operate after the burner shuts down. Once the unit cools down, the fan will stop.

### **IF HEATER FAILS TO START:**

1. Press manual reset button at rear of burner.
2. Check gas pressure supply. Supply and manifold pressure must follow those on rating plate.
3. Ensure proper power supply and extension cord is being used.
4. If heater fails to ignite after 3 attempts, call your supplier for service.

### **SAFE OPERATION PRECAUTIONS:**

1. For use with propane or natural gas only. See approval label.
2. Use toggle switch to shut down the heater. Do not try to shut down the heater by unplugging the electrical cord.
3. Do not plug anything other than the thermostat into the "Thermostat" plug.
4. Follow electrical requirements shown on rating plate and/or Electrical requirements section of this manual.
5. Before removing any guards or performing any maintenance, be sure that the main power supply is disconnected.

## COMBUSTION AIR ADJUSTMENTS:

**NOTE:** Proper combustion air adjustment must be achieved using a certified combustion analyzer to ensure complete combustion.


The air adjustment should be made to achieve 10% CO<sub>2</sub> on natural gas and 12% CO<sub>2</sub> on propane.

### SETTING THE AIR ADJUSTMENT PLATE

**A)** Regulation of the combustion air flow is made by adjustment of the manual AIR ADJUSTMENT PLATE (1) after loosening the FIXING SCREWS (2 and 3). The initial setting of the air adjustment plate should be made according to Column 5 in the Burner Set-up Chart.

**B)** The proper number on the manual AIR ADJUSTMENT PLATE (1) should line up with the SETTING INDICATOR (4) on the fan housing cover. Once set, the air adjustment plate should be secured in place by tightening SCREWS 2 and 3.

**C)** The final position of the air adjustment plate will vary on each installation. Use instruments to establish the proper settings for maximum CO<sub>2</sub>.

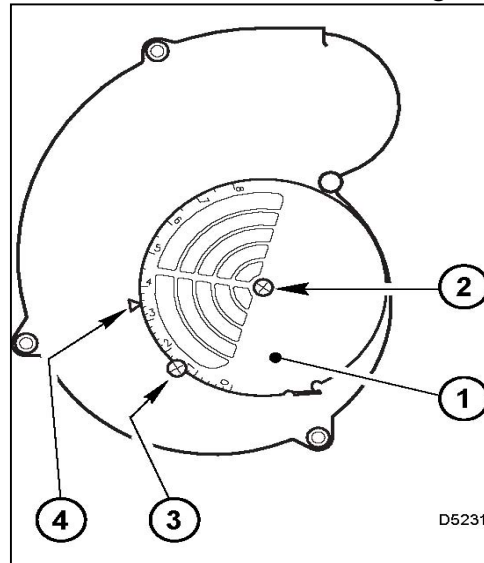

**NOTE:** Variations in flue gas, CO<sub>2</sub> and temperature readings may be experienced when the burner cover is put in place. Therefore, the burner cover **must** be in place when making the final combustion instrument readings, to ensure proper test results.

### BURNER SET-UP CHART

1	2	3	4
FIRING RATE (BTUH)	ORIFICE-NG	HEAD SETTING	AIR DAMPER SETTING
390,000	PART # FVN-426	5	4.8 LP 4.0 NG


## TEMPERATURE FEELER GAUGE ADJUSTMENT (ATTACHED TO FAN SWITCH)

The temperature feeler gauge is required to be always touching the heater exchanger.

The temperature feeler gauge controls the air flow over the fan switch, which eliminates any unnecessary fan cycling. The temperature feeler gauge can be adjusted for different outside temperatures, by rotating the location of the temperature feeler gauge holes. This will provide maximum performance of the unit in different applications.

If supply air is warm ( $-5^{\circ}\text{C}$ , indoor application):

Turn the temperature feeler gauge so that the holes are parallel with the heat exchanger. This will help the fan switch to remain cool and not overheat. See following:

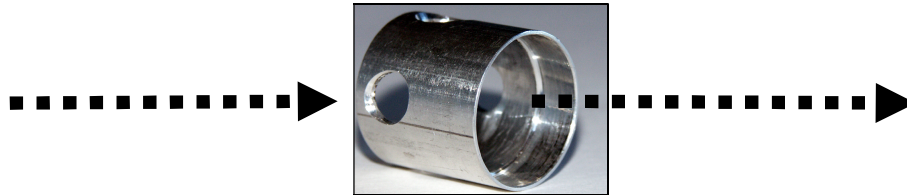

If supply air is cold (under  $-5^{\circ}\text{C}$ ):


Turn the temperature feeler gauge so that the holes are closed off as the air goes over the heat exchanger. This will reduce fan cycling and the unit from shutting down.

See following:



In extreme cold conditions, cover the holes on the temperature feeler gauge using foil tape. Ensure that the temperature feeler gauge is readjusted for warmer weather conditions. Failure to do so may result in burning out fan switches – not covered under warranty.

## BURNER DIMENSIONS

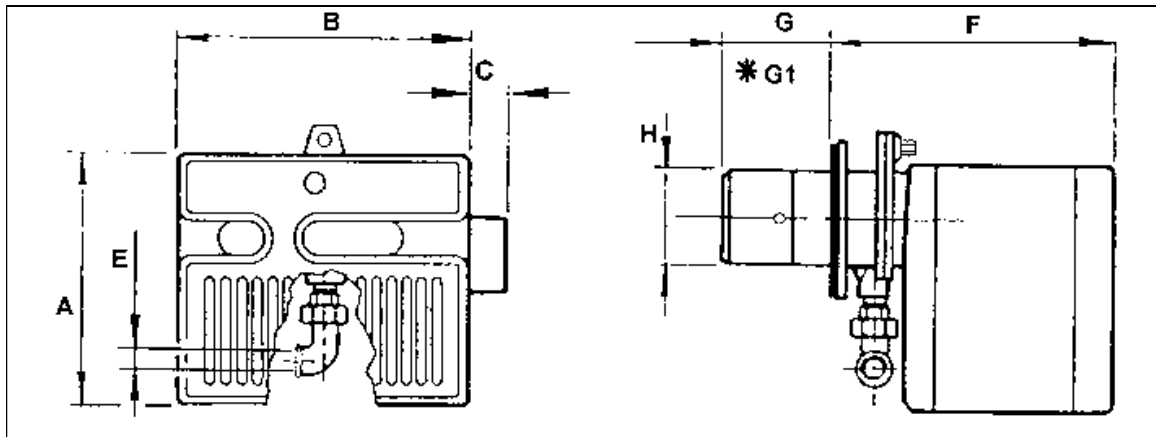


Model 400	A	B	C	F	G	*G1	H
inches	10 5/16	12	1 3/8	13 11/16	3 3/4	10	4 1/8
mm	2262	305	35	347	95	255	61

\*G1 is for LBT version

Gasket thickness is 4 millimeters


## ELECTRODE AND FLAME PROBE ADJUSTMENTS

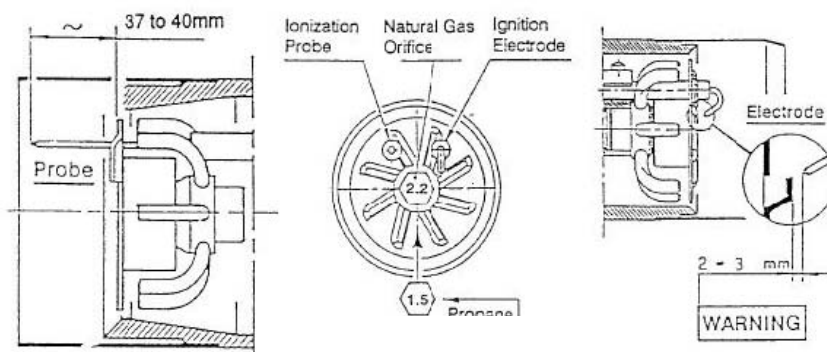

### IMPORTANT:

Do not turn the ignition electrode. Leave it as shown in the drawing. If the ignition electrode is put near the ionization probe, the amplifier of the control box may be damaged.

## TYPICAL GAS TRAIN LAYOUT

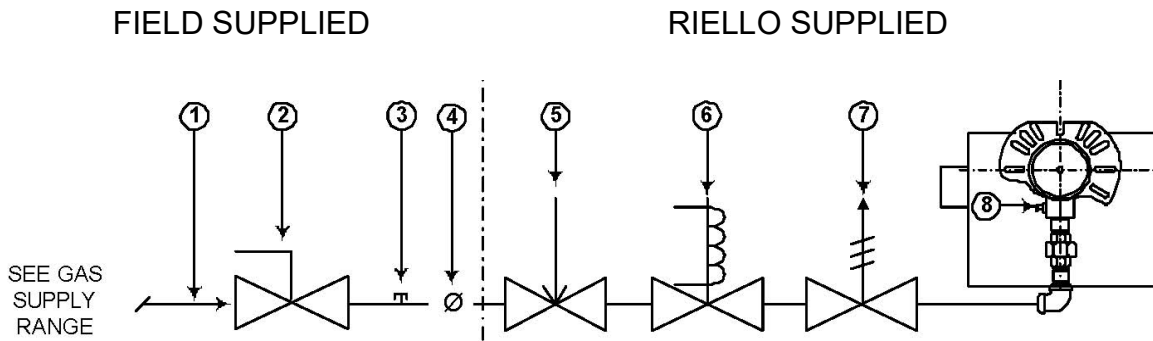

### GAS TRAIN LEGEND

- |   |  |
|---|--|
| <p><b>1</b> GAS SUPPLY &amp; FLOW DIRECTION OF GAS</p> <p><b>2</b> AS SUPPLY MAIN SHUTOFF MANUAL VALVE (FIELD SUPPLIED)</p> <p><b>3</b> GAS SUPPLY PRESSURE TEST POINT (FIELD SUPPLIED)</p> <p><b>4</b> GAS TRAIN PIPE DIAMETER SIZE(S): BURNER G120 1/2" NPT (REDUCED AT COMBUSTION HEAD TO 3/8") BURNER(S) G200 &amp; G400 3/4" NPT</p> | <p><b>5</b> GAS APPLIANCE PRESSURE REGULATOR</p> <p><b>6</b> SAFETY SHUTOFF GAS VALVE (VS) 24V OR 120V SUPPLIED) OPERATED</p> <p><b>7</b> MAIN GAS VALVE (V1) 24V OR 120V OPERATED SINGLE STAGE</p> <p><b>8</b> GAS BURNER MANIFOLD TEST POINT</p> |
|---|--|

#### GAS SUPPLY PRESSURE RANGES:

##### NATURAL GAS PRESSURE:

MIN. = 4.0" WC


MAX. 10.0" WC

##### L.P. PROPANE GAS PRESSURE

MIN. = 8.0" WC


MAX. 13.0" WC

## FIELD WIRING DIAGRAM

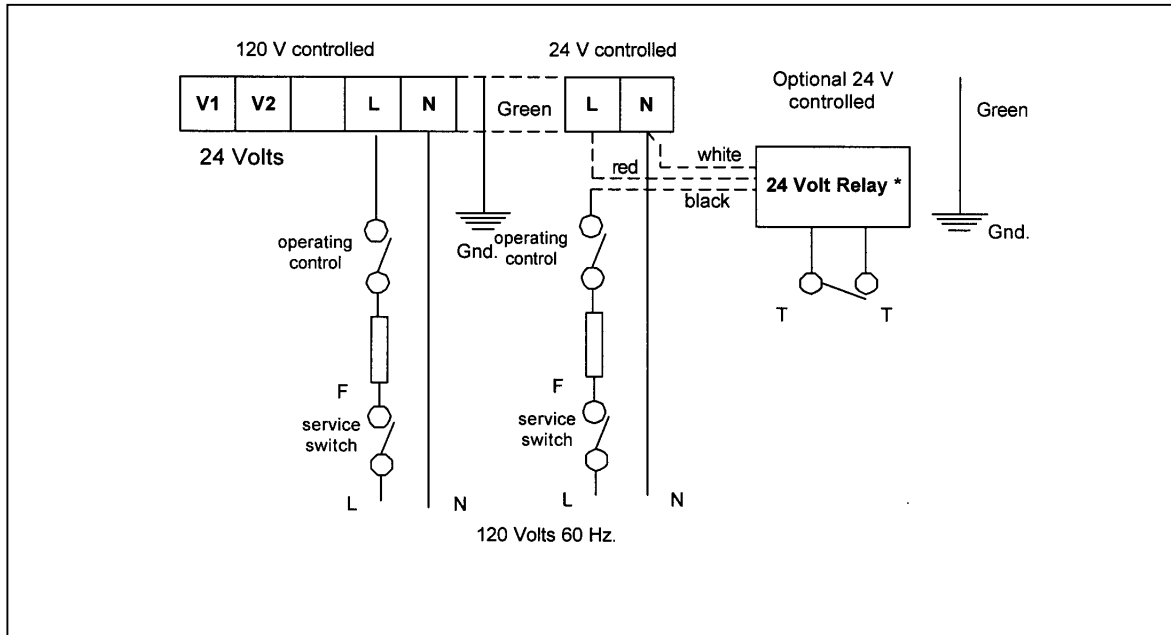





## FACTORY WIRING DIAGRAM

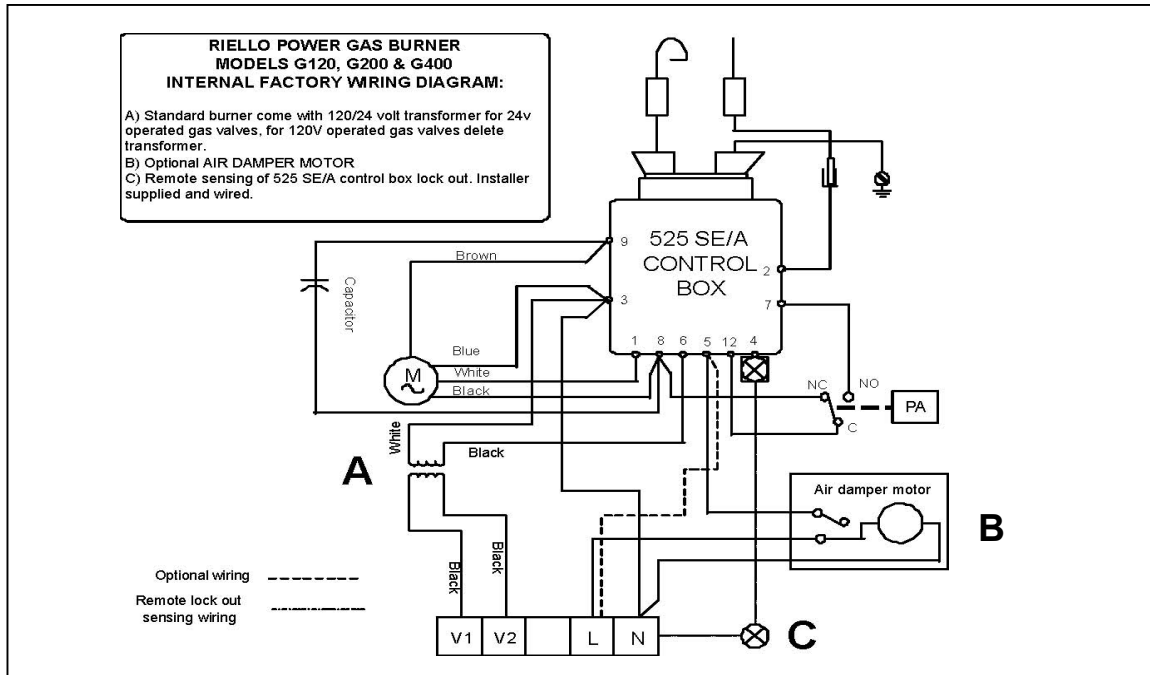


### NOTE:

1. This burner is approved for use without the motorized air damper. In these instances optional wiring is used
2. The SAFETY SWITCH on the 525 SE CONTROL BOX is equipped with a contact allowing remote sensing of burner lockout. The electrical connection is located on the CONTROL BOX terminal 4 as indicated. Should burner lockout occur, the 525 SE CONTROL BOX will supply a power source of 120 Vac to the connection terminal. The maximum allowable current draw on this terminal is 1 A.

## PARTS DIAGRAM – FVNP-400

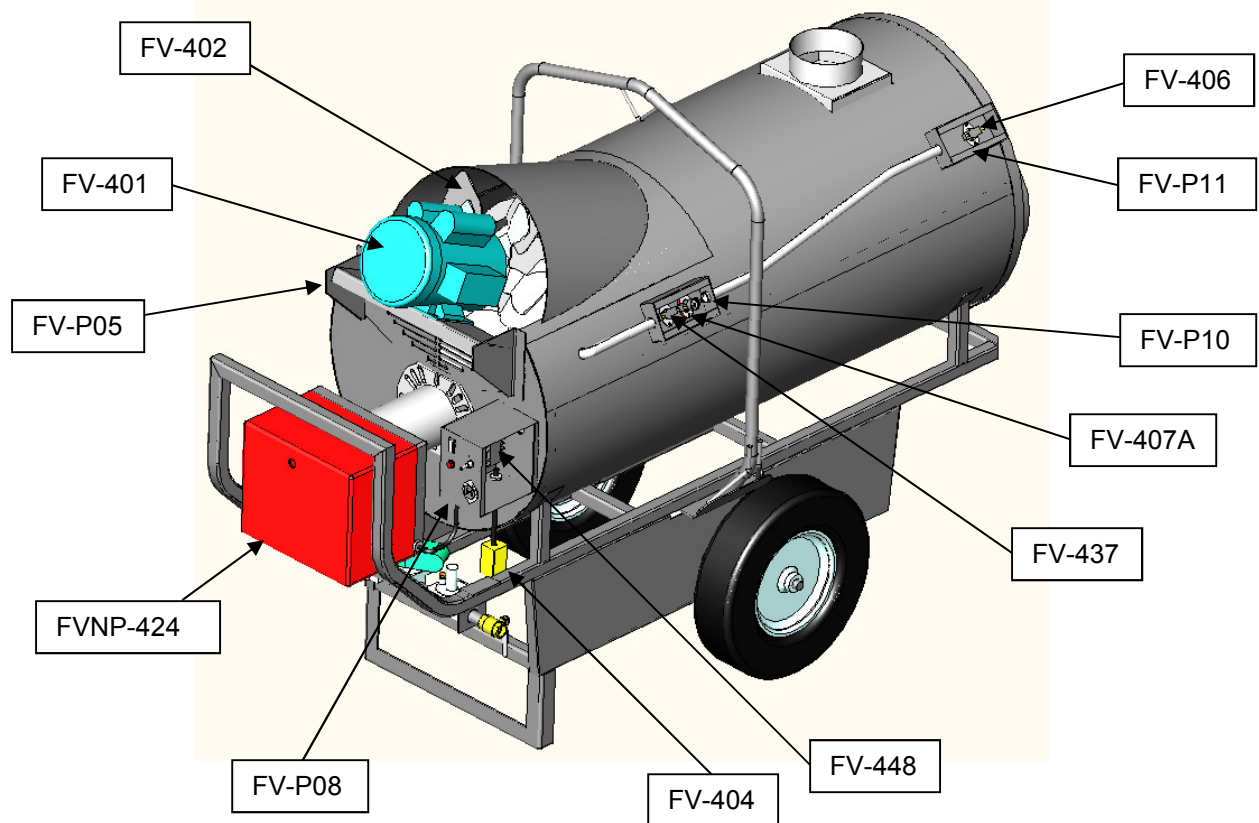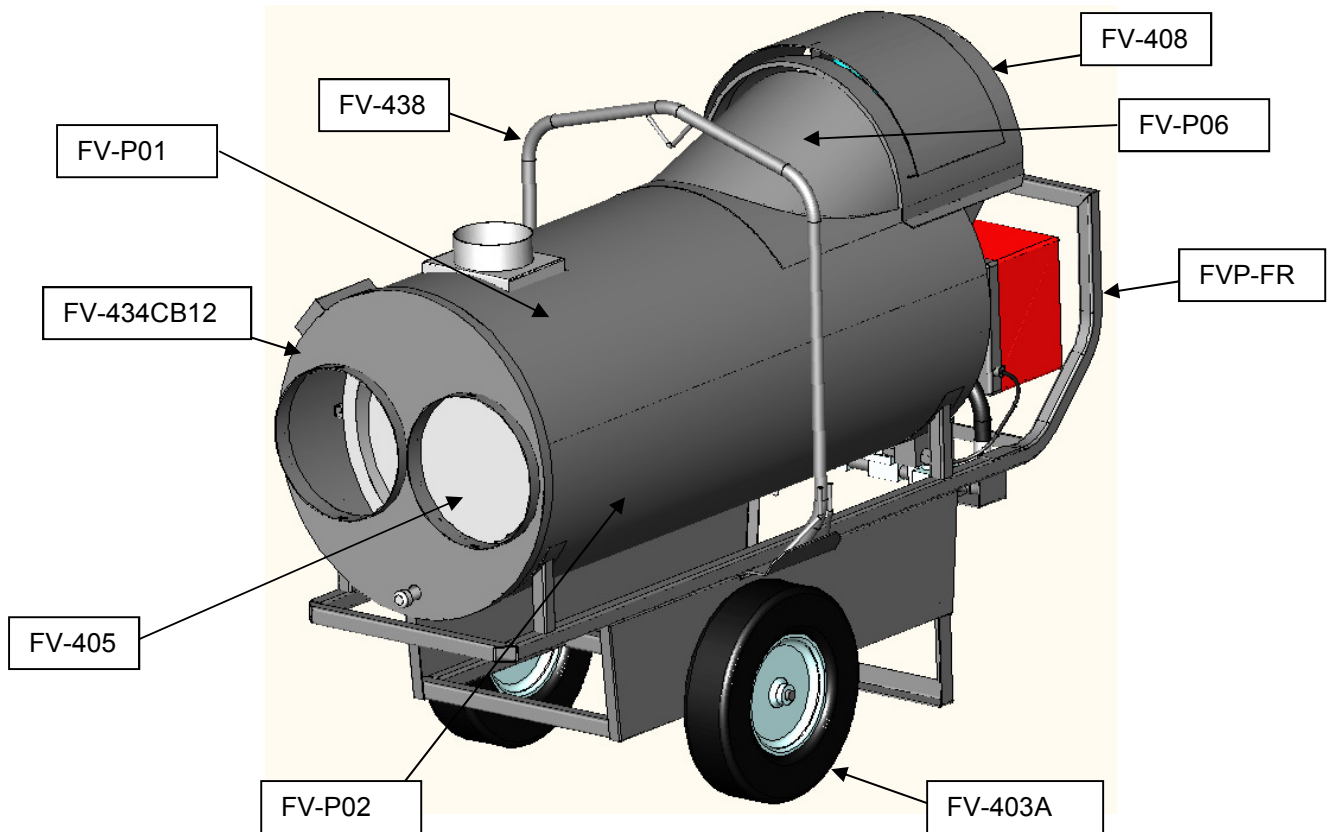

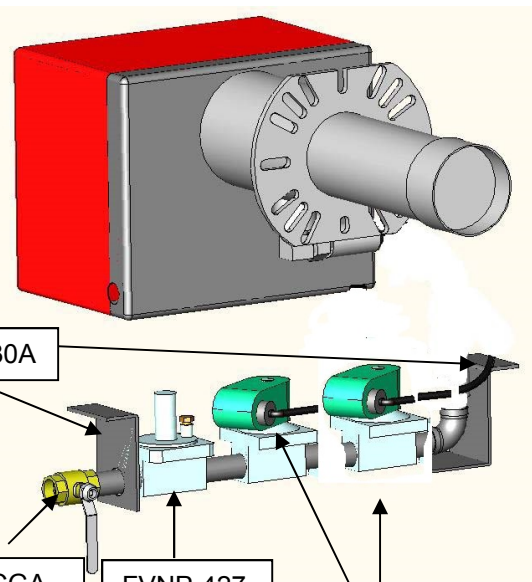

FVNP-430A

2103-E-CGA



FVNP-427

FVNP-429

FV-446 / FV-447

HC5-64

FV-431

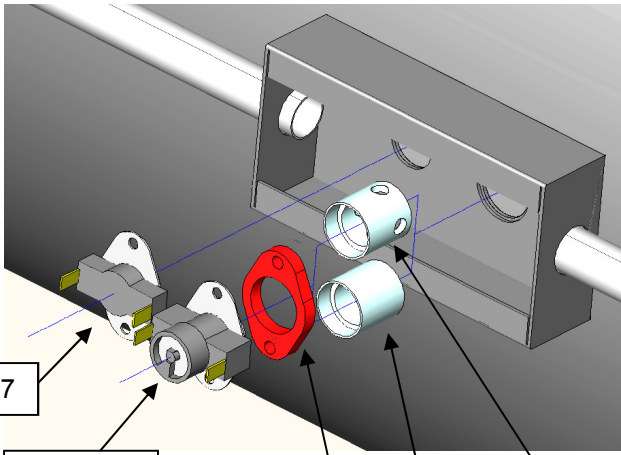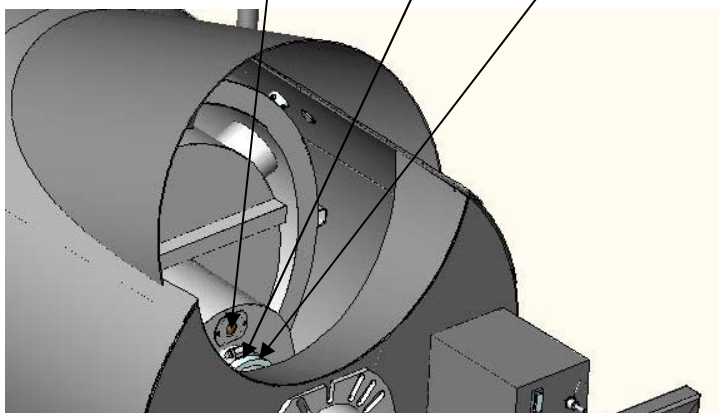

FV-437


FV-407A

FV-407G

FV-433B

FV-433

FV-450SI

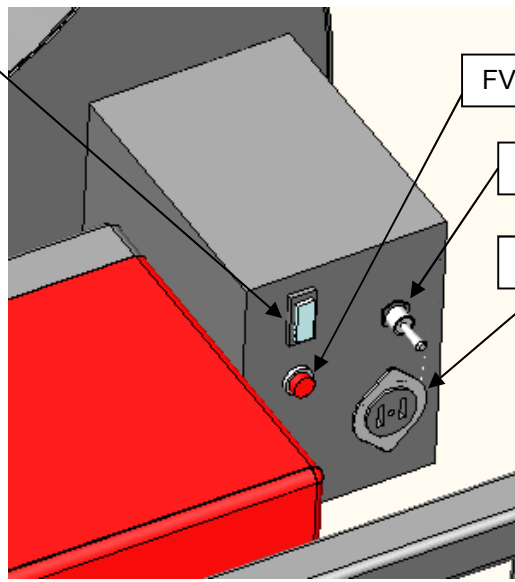


FV-411

FV-409

FV-414B

# G400 LP/NG BURNER - PARTS DIAGRAM

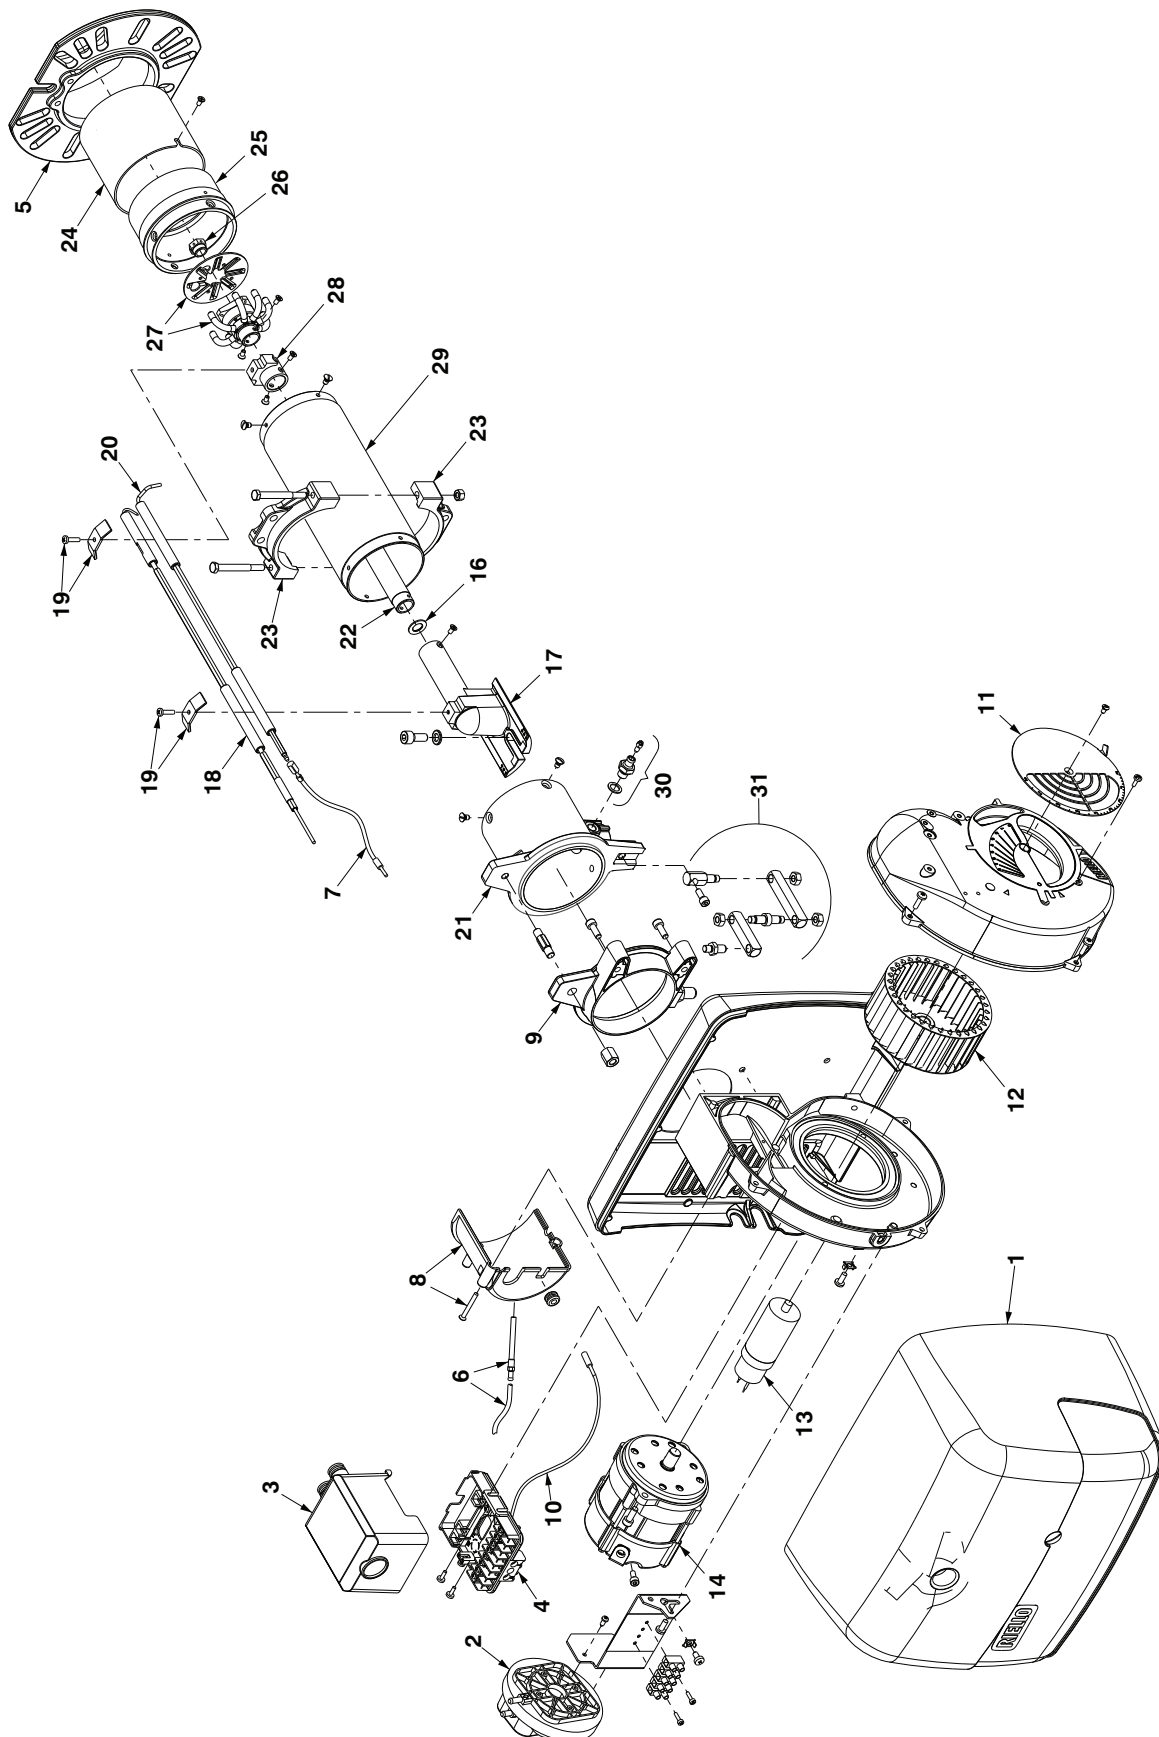

<b><u>RIELLO BURNER G400 - PARTS LIST DIAGRAM</u></b>		
<b>N#</b>	<b>PART NUMBER</b>	<b>DESCRIPTION</b>
1	FV-20136636-LPNG	PLASTIC BURNER COVER C/W LABELS
2	FVNP-3020321	AIR PRESSURE SWITCH
3	FVNP-300162	IGNITION MODULE
4	FVNP-3002307	SUB-BASE FOR IGNITION MODULE
5	FVNP-3006356	MOUNTING FLANGE
6	FVNP-3007288	AIR SWITCH TUBE & CONNECTOR
7	FVNP-3007310	IONIZATION LEAD
8	FVNP-3007293	AIR TUBE COVER PLATE
9	FVNP-3006688	CHASSIC MOUNTING COLLAR
10	FVNP-3007448	GROUND LEAD & CONNECTOR
11	FVNP-3007205	MANUAL AIR SHUTTER
12	FV-3005788	BURNER FAN
13	FVNP-3005834	BURNER CAPACITOR
14	FVO-C7001034	BURNER MOTOR
16	FVNP-3020229	DIAPHRAGM
17	FVNP-3006696	DRAWER ASSEMBLY ELBOW
18	FVNP-3007276	ELECTRODE ASSEMBLY
19	FVNP-3007265	U-BOLT
20	FVNP-3007277	FLAME ROD
21	FVNP-3007300	MANIFOLD
22	FVNP-3007290	NATURAL GAS TUBE - LONG
23	FV-3005854	SEMI-FLANGE
24	FVNP-3006693	FLAME FUNNEL
25	FVNP-3007282	TOOTH
26	FVN-426	NG ORIFICE
27	FVNP-3006699	DISTRIBUTOR HEAD & MIXING PLATE
28	FVNP-3007303	ELECTRODE SUPPORT-LONG
29	FVNP-3007285	EXTENTION
30	FVNP-3005447	TEST POINT
31	FVNP-3000870	HINGE ASSEMBLY

## **FVNP-400 – PARTS LIST**



**3/4 HP MOTOR**

**FV-401**




**16" FAN BLADE**

**FV-402**



**16" WHEEL FLAT FREE**

**FV-403A**

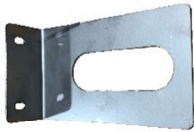

**VALVETRAIN BRACKET**

**FVNP-430A**



**SS HEAT EXCHANGER**

**FV-405**



**HIGH LIMIT OUTLET (250F)**

**FV-406**

**HIGH LIMIT BURNER (150F)**

**FV-437**



**FAN LIMIT SWITCH**

**FV-407A**



**FAN LIMIT GASKET**


**FV-407G**



**FEELER GAUGE**

**HOLES – FV-433**

**SOLID – FV-433B**



**TOGGLE SWITCH**

**FV-409**



**MAIN RELAY**

**FV-448**



**RED LIGHT**

**FV-411**



**POWER INDICATOR  
LIGHT**

**FV-450SI**



**POWER CORD**

**FV-404**



**THERMOSTAT PLUG  
(ON CONTROL BOX)**

**FV-414B**

## **FVNP-400 – PARTS LIST**



**THERMOSTAT PLUG  
(PLUG ON THB)**

**FV-415A**



**FAN MOTOR CANOPY**

**FV-408**



**FAN HOOD**

**FV-P06**



**HIGH LIMIT BOX (1 HOLE)  
FV-P11  
HIGH LIMIT BOX (2 HOLES)  
FV-P10**



**LIMIT BOX LID**

**FV-P12**



**CONTROL BOX  
(EMPTY)  
FV-P08**



**CONTROL BOX LID**

**FV-P09**



**MOTOR MOUNT BRACKET**

**FV-P05**



**REAR BURNER MOUNT PANEL**

**FV-P04**



**FRONT FACEPLATE  
FV-434CB12 – 2 X 12"  
FV-434CB16 – 1 X 16"**



**HEATER FRAME**

**FVNP-FR**



**TOP BODY PANEL**

**FV-P01**



**BOTTOM BODY PANEL**

**FV-P02**



**HEATER LIFTING HARNESS**

**FV-438**



**G400 BURNER**

**FVNP-424**

## **FVNP-400– PARTS LIST**



**4 WIRE BX CABLE  
HIGH LIMIT BOX TO  
CONTROL BOX  
FV-471**



**2 WIRE BX CABLE  
(HIGH LIMIT BOX TO  
HIGH LIMIT BOX  
FV-472**



**BURNER ORIFICE  
FVN-426**



**BURNER GASKET  
C/W CLAMP  
FV-431A**



**FUEL SELECTOR VALVE  
FVNP-431  
¾" SHUT OFF VALVE  
2103-E-CGA**



**¾" ASCO SOLENOID  
FVNP-429**



**¾" MAXITROL REG  
FVNP-427**



## **PARTS LIST FOR FVNP-400**

<b>Part Number</b>	<b>Part Description</b>	
FV-401	PRIMARY FAN MOTOR	
FV-402	16" FAN BLADE	
FV-403A	16" WHEEL FLAT FREE	
FV-404	18" POWER CORD	
FV-405	SS HEAT EXCHANGER	
FV-406	HIGH LIMIT SWITCH (OUTLET) (250F)	
FV-407A	FAN LIMIT SWITCH (ADJUSTABLE)	
FV-407G	FAN LIMIT SILICONE GASKET	
FV-408	FAN MOTOR CANOPY C/W LABELS	
FV-P01	TOP BODY PANEL	
FV-P02	BOTTOM BODY PANEL	
FV-P04	REAR BURNER MOUNT PANEL	
FV-P05	MOTOR MOUNT BRACKET	
FV-P06	FAN HOOD	
FV-P08	CONTROL BOX	
FV-P09	CONTROL BOX LID	
FV-P10	LIMIT BOX (DOUBLE HOLE)	
FV-P11	LIMIT BOX (SINGLE HOLE)	
FV-P12	LIMIT BOX LID	
FVNP-FR	FVNP HEATER FRAME	
FV-409	TOGGLE SWITCH (ON CONTROL BOX)	
FV-411	RED LIGHT (ON CONTROL BOX)	
FV-414B	THERMOSTAT PLUG (ON CONTROL BOX) 2011>	
FV-415A	FEMALE CONNECTOR FOR FV-THB	
FVNP-424	RIELLO BURNER	
FVNP-427	MAXITROL REGULATOR (RV52)	
FVNP-429	ASCO SOLENOID VALVE	
FVNP-430A	VALVE ASSEMBLY MOUNTING BRACKETS (2)	
FVNP-431	FUEL SELECTOR VALVE	
2103-E-CGA	3/4" SHUT OFF VALVE	
FV-431A	BURNER GASKET C/W CLAMP FOR FVNP	
FV-433	FEELER GAUGE	

FV-433B	FEELER GAUGE - SOLID	
FV-434CB12	FRONT FACE PLATE (2 X12")	
FV-434CB16	FRONT FACE PLATE (1 X16")	
FV-437	HIGH LIMIT (REAR) (150F)	
FV-438	LIFTING HARNESS	
FV-446	SIGHT GLASS C/W FIBER GASKET	
FV-447	SIGHT GLASS WASHER	
FV-448	MAIN RELAY	
FV-450SI	POWER SUPPLY INDICATOR FOR FV-SERIES 2014>	
FV-471	30" 4 WIRE BX CABLE	
FV-472	40" 2 WIRE BX CABLE	

	<b>ACCESSORIES</b>	
FV-HD12	12" X 12-FT HITEX DUCTING (PIN LOCK)	
FV-HD12X25	12" X 25-FT HITEX DUCTING (PIN LOCK)	
FV-HDG16	16" X 25-FT HITEX DUCTING (CUFF & BUCKLE)	
FV-THB	THERMOSTAT C/W 25FT CORD/FEMALE PLUG END	
FV-THB (15M)	THERMOSTAT C/W 50 FT CORD/FEMALE PLUG END	
FVN-426	NG ORIFICE	
FV-VK	6" X 3FT C-VENT C/W RAIN CAP	

# FV SERIES WIRING DIAGRAM

